


FlexTrak Installation Manual

This document covers everything you need to know in order to build, configure and receive telemetry/imagery from your own GPS/LoRa radio tracker, using the FlexTrak tracker board and a Raspberry Pi Zero computer. It also covers the use of the APRS add-on boards and DS18B20 add-on sensors.

Introduction

This is the FlexTrak board:

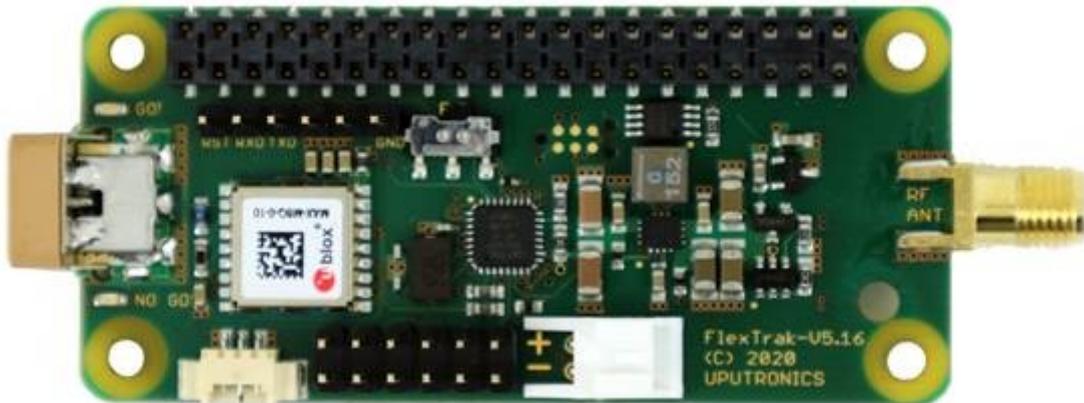

What you are looking at is the top of the board, and this side should still be visible after you've connected it to the Pi, as we will discuss in the next section.

FlexTrak is a unique solution since it contains its own micro-controller (ATmega 328p) which can run completely independently of the attached Raspberry Pi. So even if the Pi crashes or reboots then the tracker will keep running. It also means that, once programmed, it can be used on its own (just add battery and aerial) to make a lightweight low-power tracker.

On the board you will find:

- Buck/boost converter
- Atmega 328p running at 8MHz
- UBlox GPS receiver rated for up to 50km altitude
- LoRa module for 434 / 868 / 915 MHz operation (according to model)
- Temperature sensor plus socket for external DS18B20 temperature probe
- Pin header for APRS and Sensor/Cutdown add-on boards

The board can be used as a standalone tracker, with settings (such as frequency and payload ID) stored in flash memory. However we expect the vast majority of customers to use it with the supplied Raspberry Pi Zero WH, which adds the following features:

- Take photos using a connected Pi camera
- Send photographs to the ground by radio
- Predict the landing position and add that to the telemetry
- Configure the FlexTrak board from a text INI file
- Update the FlexTrak firmware

You can also connect other Pi HATs to the Pi using stacking connectors. This enables, for example, the addition of other sensors which are read by the Pi and sent to the tracker board for transmission over the radio link to the ground. It also includes our APRS and cutdown/sensor boards which connect to the FlexTrak board directly.

What's In The Kit

In the kit you will find:

- FlexTrak Board (pre-programmed)
- Raspberry Pi Zero W board
- 32GB Micro SD Card (pre-programmed)
- Battery Holder for 4 AA cells (only use Energizer Lithium cells for flight)
- Power cable
- Pin Header, spacers and bolts for mounting FlexTrak on the Pi
- Pi Zero Camera Cable
- Single-ended coax cable (pigtail) from which to make an aerial

Differences From Pi In The Sky

If you're familiar with our previous PITS product, here's a quick list of differences:

- Tracker starts immediately on power-up – no wait for Pi boot
- Tracker runs independently of Pi
- Pi just provides image data, landing prediction, and any extra sensors you addition
- Uses LoRa rather than RTTY
- Pi code is Python so easier for most people to modify than the PITS C code
- Programmed SD card is supplied so no need to set one up from scratch

Assembly

First, place four of the supplied 11mm stand-offs on the Raspberry Pi Zero W board, at each corner and screw in from below. The stand-offs should be on the same side as the header:




Next, place the supplied 2x20 header onto the Raspberry Pi, checking that it aligns correctly in both directions, and being careful not to bend any pins on the Pi or the header.




Note: If you want to stack another board on top, then use the stacking header supplied with that board. Stacking headers have much longer pins. If you use our APRS and/or sensor/cutdown boards, then the sequence is Pi Zero then FlexTrak then sensor/cutdown board then APRS board.

Now place the FlexTrak board on top, ensuring that it is the correct way up (i.e. header and components on the top):

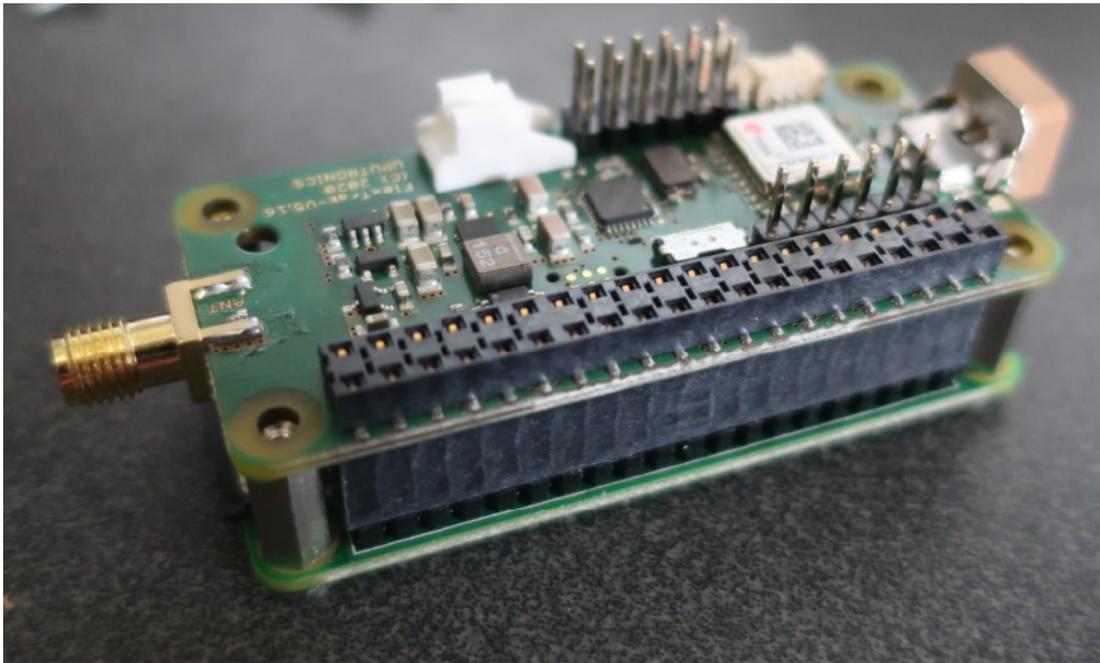


Screw the remaining 4 screws into the stand-offs to secure the board in place.

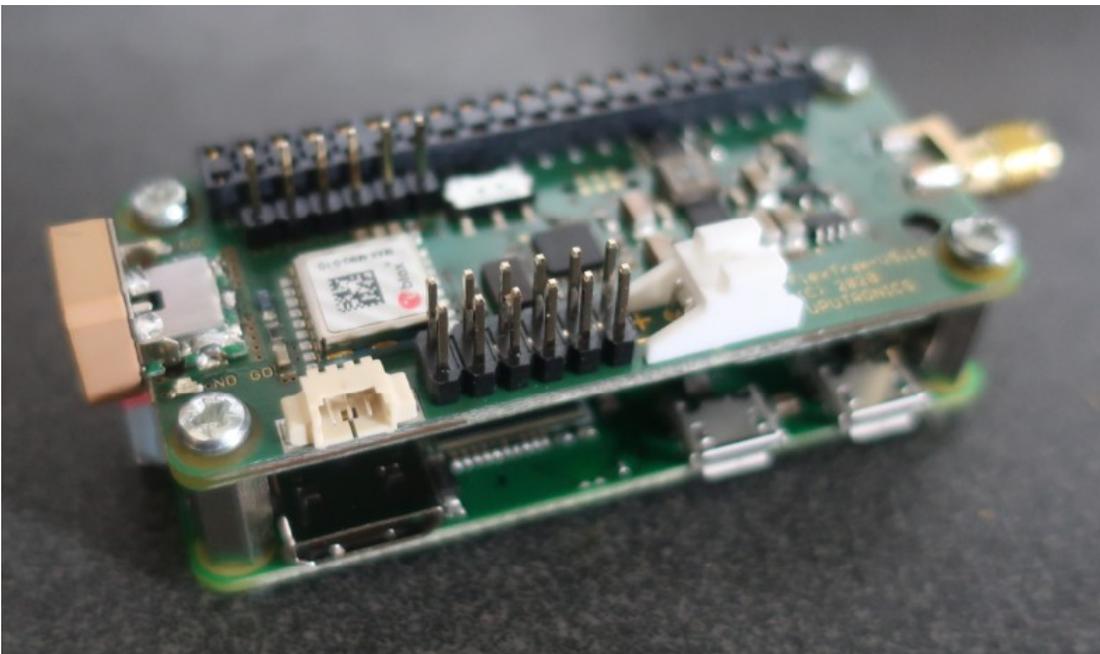

Finally, plug in the micro SD card and, if you are using one, a Pi camera.

FlexTrak Connections

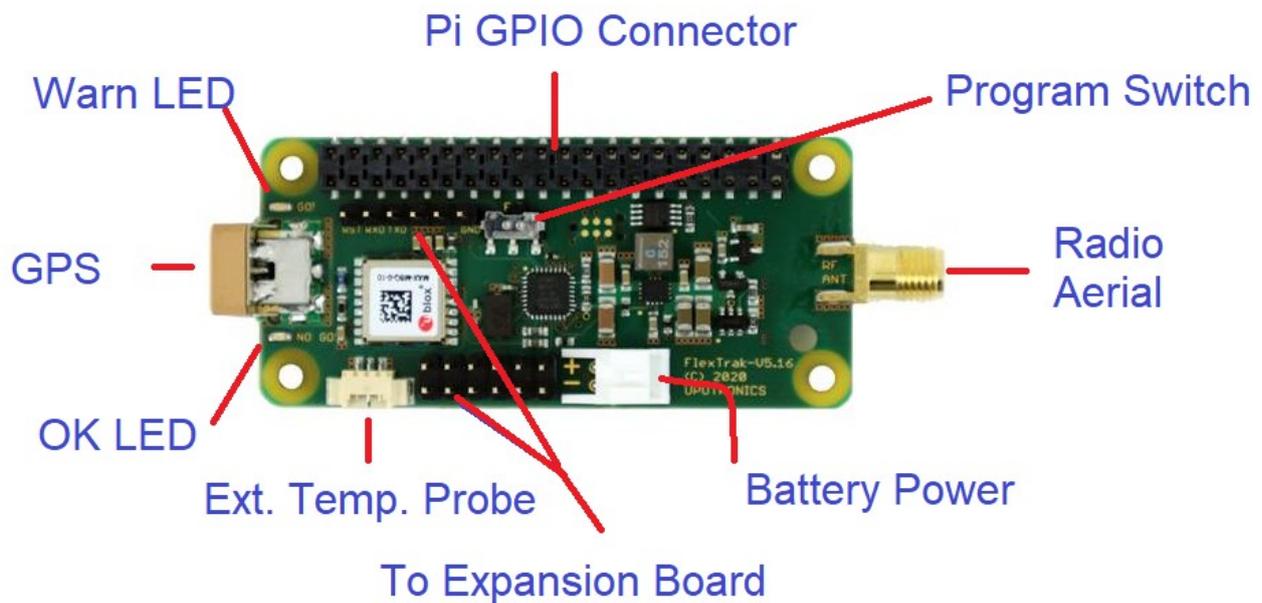

- Radio Aerial Connector – this connects to an aerial made from the supplied "SMA Pigtail".
- Battery Power Connector- A cable is supplied. For testing you can use standard alkaline cells, but for the flight you must use 4 fresh Energizer Lithium cells.
- Expansion Board Pins – For the optional APRS and Cutdown/Sensor boards.
- External Temperature Probe – for the optional DS18B20 temperature probe.
- OK LED – Flashes green to show valid GPS position.
- GPS Aerial - The GPS aerial needs a clear view of the sky, so place it very close to an external window when testing, and near the top of the payload away from any metal or electronics when flying.
- Warn LED – Flashes red to show no valid GPS position. The amount of time taken to gain lock depends on how visible the sky is from the GPS antenna, and can be several minutes especially if indoors.
- Pi GPIO Connector – Used to connect to the Pi and, if you add more boards with a stacking header, connects to those also.
- Program Switch – Switch to “P” (Program) to program the board from the Pi, or “F” (Flight) to disable programming. We recommend setting to “F” for flight to prevent any remote possibility of the Pi interfering with operation of the tracker.

As the Pi Zero does not have a network connection, if you wish to connect it to a network we recommend use of a USB-LAN adapter; some of these have a micro USB plug and will plug directly in to the Pi Zero; others have a full size “A” plug and need to connect via an “OTG” USB cable adapter.

Starting The Tracker

If you have one handy, connect an aerial to the SMA socket, however the tracker will work over a few metres without an aerial. For flight you will need to make an aerial from the supplied pigtail (see later section).

Connect the Pi Zero to a USB keyboard. You may need a micro USB to USB adapter for this.

Connect the Pi Zero to a HDMI monitor. You may need a micro HDMI to HDMI adapter for this.

In lieu of the above, you can control the Pi over a wired network, by connecting the Pi Zero to that network with a suitable adapter such as this one which includes full-size USB sockets for keyboard etc.:

<https://thepihut.com/products/ethernet-hub-and-usb-hub-w-micro-usb-otg-connector>

Connect the Pi Zero to power via the micro USB power connector.

The FlexTrak board will start immediately, transmitting telemetry over the radio.

Once GPS lock has been established, the WARN LED will go out and the green OK light will flash.

The Pi will boot and will automatically start the Pi tracker software. When that software starts it will send new configuration settings to the FlexTrak board, so if for example you have changed the payload ID, then the tracker board will start sending that new payload ID once the Pi has booted. The new settings are stored in flash memory on the FlexTrak board so will be used immediately that power is applied in future.

Logging In To The Pi

You can login with a connected keyboard/monitor or over a wired network with a USB-LAN adapter and use a suitable terminal program (e.g. putty) to connect to it. We have set the hostname of the Pi to "flextrak", and the login name/password are the Raspberry Pi defaults of pi/raspberry.

Using either method you can change the configuration of the tracker (see the next section). You can also connect the Pi Zero W to a wireless network, and use that or a wired network to load any software updates.

Configuration

The tracker configuration is done via a small text file on the “boot” partition of the SD card. This partition is a normal FAT (Windows) partition so it can be edited by placing the SD card in the SD card reader of any Windows PC or Mac, using a good text editor (**not** Notepad on Windows!). However we recommend editing from the Pi, using nano or whatever editor you prefer.

The file contains many options, and often more are added with each new release of the software. For now we suggest that you only change the “payload” line, choosing a payload name unique to your project; in any case don't change anything unless you know what it does and why you are changing it! Later you will probably wish to set the radio frequency to avoid clashes with any other flights; the remaining options can probably remain as they are.

The tracker is configured on the Pi. Most of the configuration is then sent to the tracker board when the Pi tracker software starts, the exceptions being settings that only affect the Pi e.g. camera settings.

To edit the configuration from the Pi, using nano, type the following commands:

```
sudo nano /boot/flextrak.ini
```

The file is in sections

General Section

```
[General]
SerialDevice=/dev/ttyAMA0
PayloadID=PIAVR
FieldList=01234569ABCD
```

SerialDevice is the serial port that connects to the tracker. No need to change this!

PayloadID is the name that your tracker will appear as on the live map. It's generally best to keep it short with a max of 6 characters, though it can be up to 32 characters.

FieldList is the list of fields (e.g. latitude, longitude) sent in the telemetry. Changing this is an advanced subject that will be covered in a separate document.

Landing Prediction

```
[Prediction]
Enabled=True
LandingAltitude=200
DefaultCDA=0.7
```

You can disable the landing prediction but we recommend it is left enabled. The prediction is calculated during the flight based on the current position, winds measured during ascent, and the measured performance of the parachute during descent.

GPS Setting

```
[GPS]
FlightModeAltitude=2000
```

This is the altitude at which the GPS will switch from pedestrian mode (for more accuracy on the ground) to flight mode (to work above 18km). This just needs to be set to an altitude in metres that is comfortably above your launch and expected landing sites.

LoRa Radio Settings

```
[LORA]
Frequency=434.225
Mode=1
```

The default frequency (in MHz) should be changed if you expect to be flying at the same time as another balloon using the same frequency, in which case you should it should be moved by at least 50kHz i.e. to 434.175MHz or lower, or 434.275MHz or higher.

Mode 1 is best if you are using the Pi to download camera images; if not then Mode 0 is a bit better for range.

Camera Settings

```
[Camera]
High=2000
Rotate=False
LowFullWidth=2592
LowFullHeight=1944
LowFullPeriod=0
HighFullWidth=2592
HighFullHeight=1944
HighFullPeriod=0
LowRadioWidth=320
LowRadioHeight=240
LowRadioPeriod=0
HighRadioWidth=640
HighRadioHeight=480
HighRadioPeriod=0
```

When the tracker is above High metres, then the High___ settings are used, otherwise the Low___ settings are used.

The ___Full___ settings are for full-sized images that are *not* sent over the radio; the ___Radio___ settings are for smaller images that are sent over radio. Do not be tempted to substantially increase the size of the latter images as radio bandwidth is limited and you will not get many images downloaded during the flight.

The ___Period settings set the number of settings between images; somewhere around 15-30 seconds is good, and setting zero disables photography.

SSDV Settings

```
[SSDV]
LowImageCount=4
HighImageCount=8
```

These set the number of image packets per telemetry packet. For lower altitudes it's best to have more frequent telemetry updates (so a lower count) so you get a better final position as the flight comes in to land.

Remember that your changes will only take effect once the tracker program on the Pi is restarted. You can do this manually with these commands:

```
cd ~/flextrak
sudo killall startup
python3 tracker.py
```

Receiving And Decoding

All of the above has been about setting up the balloon tracker, and that should now be working, picking up its position by GPS and transmitting it by radio. How then do we receive that signal, decode it to get the position, and display it on a map?

This diagram shows the complete system:



The radio signal from the balloon contains data packets – telemetry or image data – encoded into the signal. This is picked up by an aerial which feeds it into a radio receiver which decodes the signal back into packets identical to those that were transmitted.

These packets are then read by a computer and uploaded to the internet where the telemetry is used to show the balloon position on a map, and the image packets are used to build up images. Typically, the software that does this also displays the telemetry (GPS data, temperature etc.) and often can provide additional information such as distance and direction to the payload.

A key feature of the system is that it works with multiple receivers, so you can set up a fixed tracker at one location (e.g. school) and a mobile tracker in a vehicle. The latter can upload its own position to the map so that people can see how close the chase vehicle is to the balloon. Additionally, if you inform the high altitude ballooning community of your flight, then those in your country will be very happy to help track your balloon.

Receivers

There are several options for receiving LoRa signals from your balloon, and the choice depends on where you want to set up receivers.

When you fly your balloon, by far the most important location for a receiver is with you when you chase it. That's because you will probably be closer to the flight as it lands than anyone else, and because you need to be able to find out exactly where it has landed. For this, a handheld receiver is ideal, and you can make one with our LoRaGo device and an Android phone or tablet.

It's also good to set up a fixed receiver, which you can use not only for your flight but also to receive other peoples' flights to get practice before it's time for your flight. LoRaGo is a option for this too, connected to a phone or tablet or Windows PC, or you can a permanent receiver with a Raspberry Pi and LoRa board.

So, your main options are:

- Mobile setup with LoRaGo and an Android device
- Fixed setup with Pi LoRa Gateway

Mobile Android Receiver - LoRaGo

For this you need:

- LoRaGo Device:

https://store.uputronics.com/index.php?route=product/product&product_id=111

- Android phone or tablet with USB OTG capability (only old devices don't have that)

- HAB Explora which you can install from the Google Play Store:

<https://play.google.com/store/apps/details?id=com.daveakerman.HABExplora&hl=en>

LoRaGo is a tiny USB-powered LoRa receiver ideal for use with FlexTrak:



LoRaGo comes with a small aerial but you can buy or build a small Yagi aerial then that will increase range substantially.

HAB Explora is an app for Android that provides the essential functions required when chasing a high altitude balloon (ideally one transmitting LoRa packets, but other modes can be integrated):

- Configures LoRaGo and receives telemetry/SSDV from it
- Display of received telemetry – GPS position etc
- Display of distance and direction to payload
- Display of map with balloon and chase positions
- Function to display driving route on the map
- Function to provide navigation to balloon using Google Map or Wyze etc
- Chase car upload to the distributed HAB network
- Backup reception of telemetry from the distributed network

Software Installation

You can request installation on any of your Android devices from this link:

<https://play.google.com/store/apps/details?id=com.daveakerman.HABExplora&hl=en>

Or, on the device, open the Play Store and search for “habexplora”.

Usage


See this video on how to use the app:

<https://www.youtube.com/watch?v=KoOb-ONnecE>


Start the app (note: these screenshots are from an earlier version so you may notice some small changes and additions):



When it starts it will ask for permission to use the device's location; since this is needed for almost all program functions then it's best that you agree!

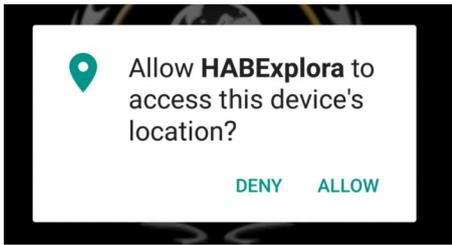

For USB, connect the LoRa receiver via the supplied USB OTG cable, taking care to connect the host end to the phone and the slave end to the receiver. Android will ask you if you wish to allow the app to use the device (again, you do!).

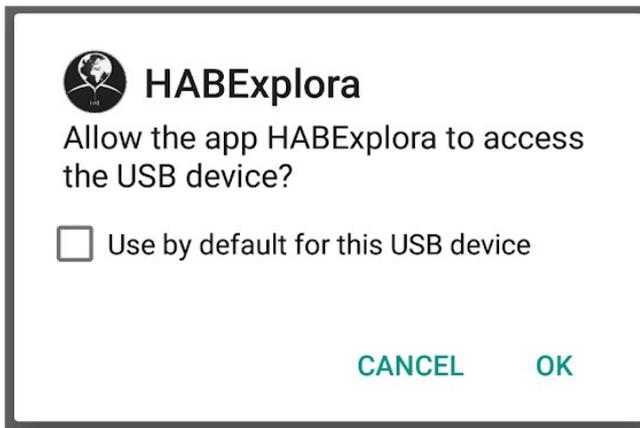

Check the box so that this app is automatically started when you reconnect this USB LoRa device.

Screen Elements

The app has 3 screen sections. At the top is the main menu with 4 buttons:



- Payloads – Shows received telemetry for up to 3 payloads
- Direction – Shows the direction and distance to the selected payload
- Map – Embedded Google map showing balloon(s) and chase device
- Settings – Shows the various setup screens

The bottom of the screen is for status:




This shows the LoRa USB status, LoRa Bluetooth status, Habitat status and GPS status. These blocks are colour-coded with black-on-dim-yellow meaning not in use; red text shows error or no recent data; green shows good recent data. The bar also shows current UTC time from the phone's GPS. The circles, where present, show the upload status to Habitat (Green = Good, Red = Failed, Grey = Not in use).

The central area is for function-specific screens, and initially just shows a splash screen with app version number.

Settings

The first thing we need to do is set up a few things, on the GPS and USB settings pages. So click on Settings and you will see:

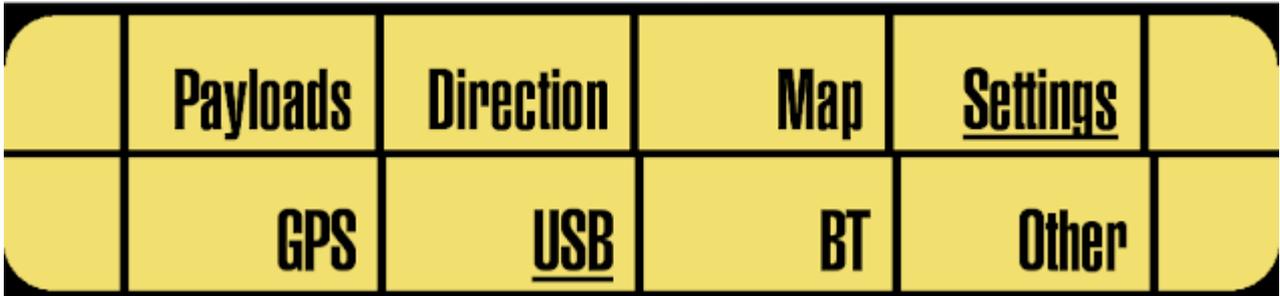

- GPS – Controls upload of phone GPS position
- USB – Settings for the attached USB LoRa receiver
- BT – Setting for an attached Bluetooth LoRa receiver
- Other – Miscellaneous settings e.g. control telemetry downloads from Habitat

Touch the appropriate button to enter your desired section. Once there, make your adjustments and then touch “Apply” or “Cancel”. We start with GPS:

GPS Settings

Chase Car ID:

Period (s):


Enable Upload

“Chase Car ID” is what your position will appear as on the spacenear.us map, so use your name or device name or project or school name or, if you have one your ham radio callsign.

“Period” is how many seconds between uploads – 30s is good.

Touch “Enable Upload” (so it is highlighted in yellow) to enable the uploads. Your position will start to appear on the HAB map. You can switch the upload off for now, but remember to switch it back on for your flight.

LoRa USB Settings

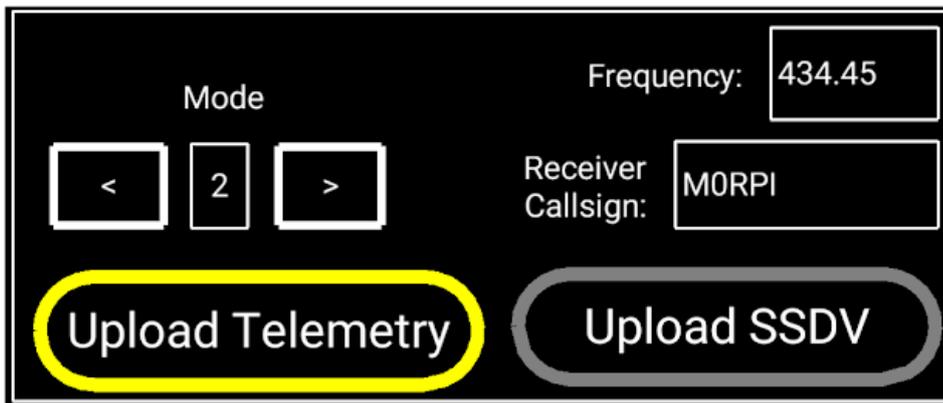

The screenshot shows a dark-themed interface for LoRa USB settings. At the top left, the word "Mode" is displayed above three buttons: a left arrow, the number "2", and a right arrow. To the right, the "Frequency:" label is followed by a text box containing "434.45". Below that, the "Receiver Callsign:" label is followed by a text box containing "MORPI". At the bottom, there are two large, rounded buttons: "Upload Telemetry" (highlighted with a yellow border) and "Upload SSDV" (with a grey border).

“Frequency” is the centre frequency to set the receiver to. **Set it the same as set in your tracker.**


“Mode” is the LoRa mode to set from 0 to 7; most commonly 0 is used for telemetry, and 1 for SSDV with telemetry. **Set it the same as set in your tracker.**

“Receiver Callsign” is used when uploading telemetry and will appear in the listener section against the payload on spacenear.us.

The 2 buttons enable upload of telemetry and SSDV from the tracker.

Sources

You should now be receiving telemetry from the tracker, and you can check that on the Sources screen: touch the status bar on any of the source buttons (USB/Habitat/GPS).

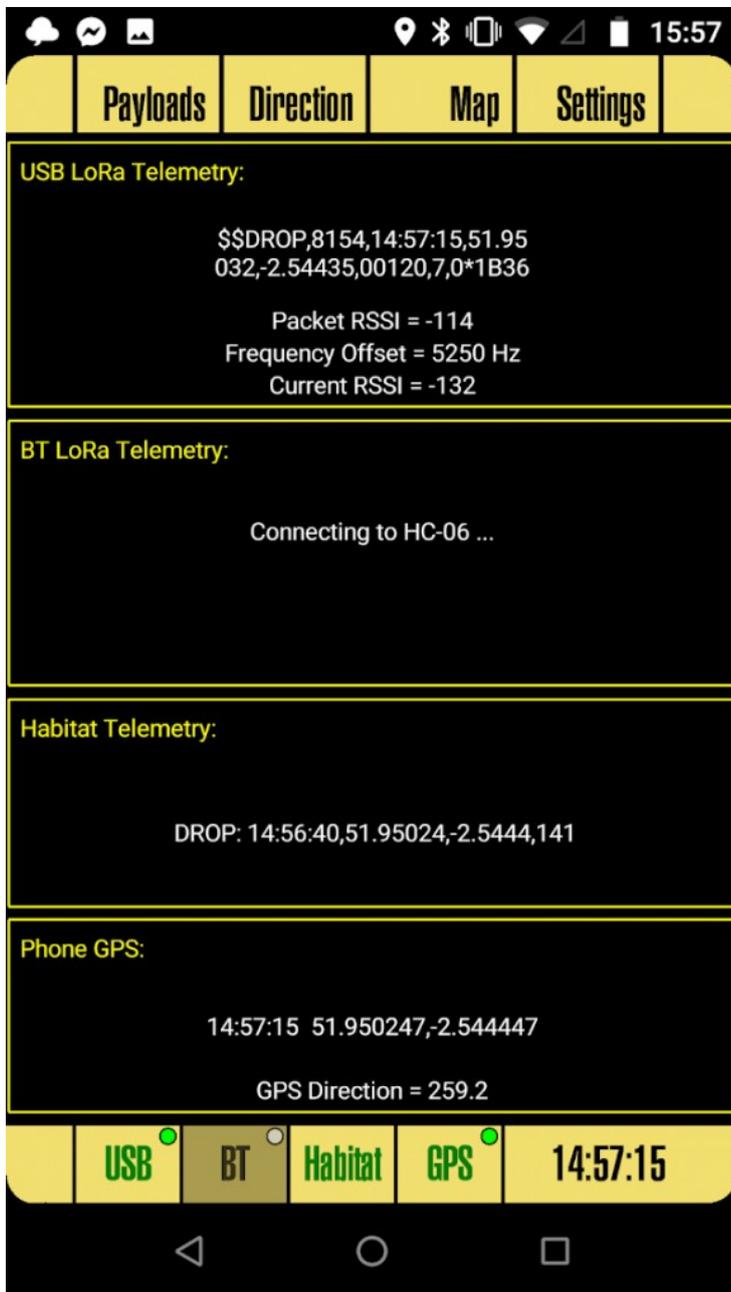


If you don't see telemetry in the top section (the one for LoRaGo) you may need to adjust the received frequency a little, so go to the Settings – USB screen and increase the frequency by 3kHz. If that does not work, reduce it down to 3kHz below the tracker frequency.

Payloads Screen

Up to 3 payloads can be displayed; if a 4th is heard then it will replace whichever of the other 3 has the oldest data. For your testing and flight of course you're only going to see one payload – yours!


Each displayed payload shows the payload ID, time since last message received, UTC time of that message (as sent by the payload), latitude and longitude, altitude (with maximum altitude in brackets), and ascent/descent rate.

If you do have multiple payloads then you can select between them by touching in the box for the desired payload; the selection will then have a thicker border than the others. Once done, the selected payload will be used on the direction screen and for navigation.

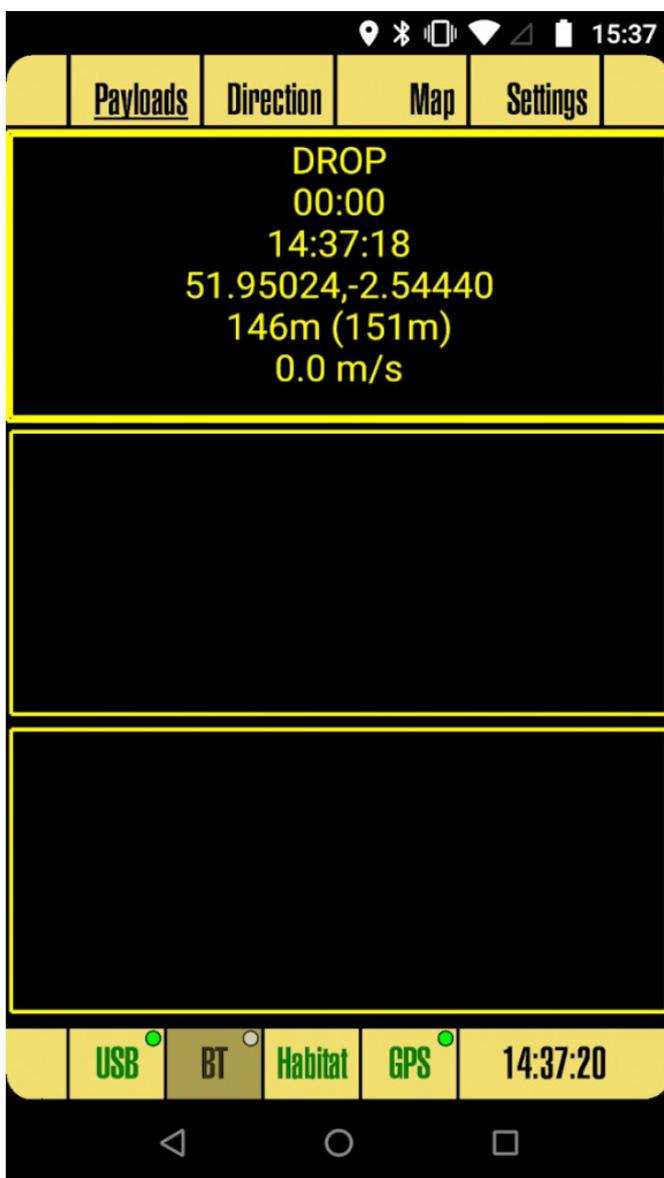

Direction Screen

This screen shows the distance and direction from your location to the latest position received from the payload.

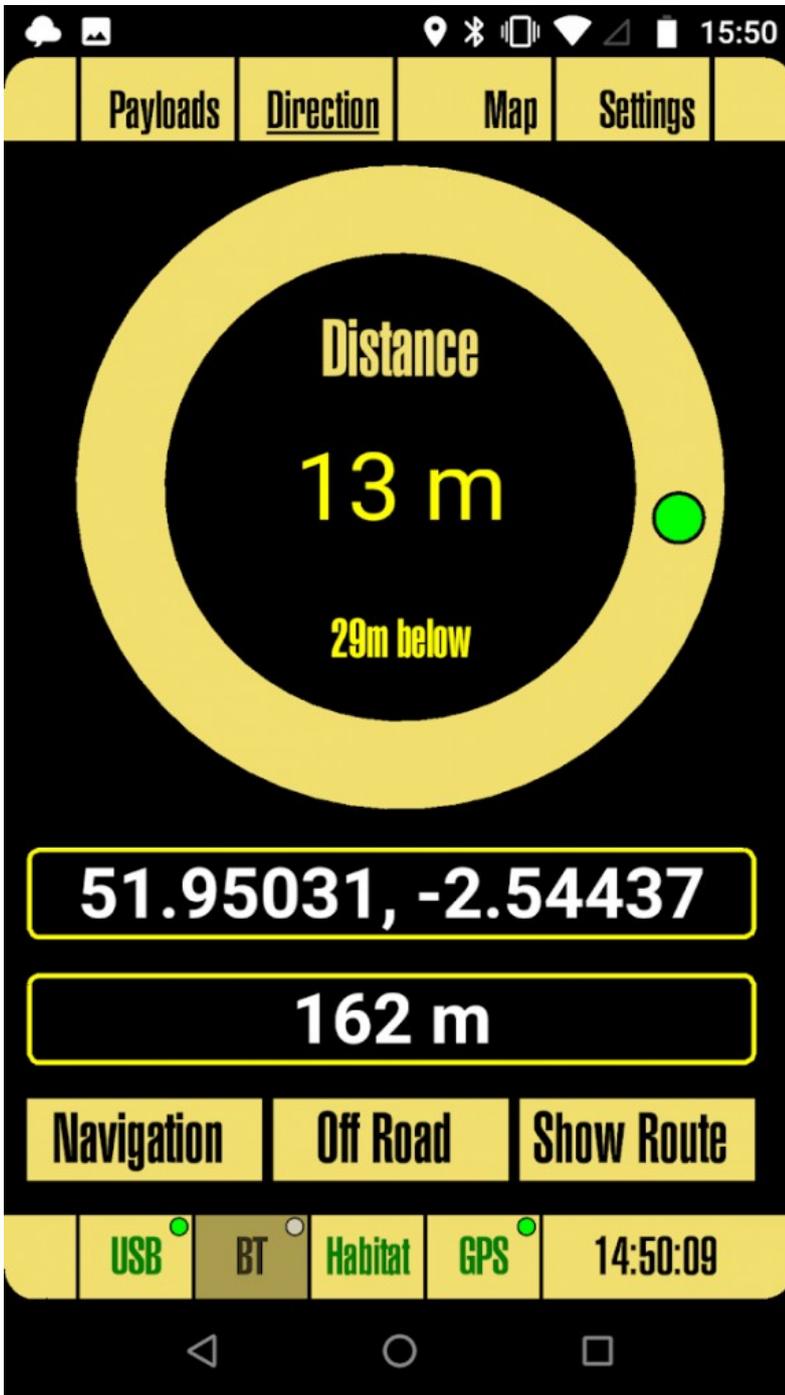

If your phone has a magnetic compass then that will be used; if not then the GPS “heading” value will be used. The former gives direction to the phone’s orientation; the latter gives the the phone’s direction of movement and for tor this to be accurate you need to be moving, so if you aren’t then walk approx 10-20 metres in a straight line. If the phone isn’t reporting a heading then the compass marker will be in red, and will show the payload direction relative to North (North = straight ahead).


Below the compass there are blocks for the payload latitude, longitude and altitude. Below these are buttons for navigation and map directions to the payload:

- Navigation invokes a navigation app. First time you do this Android will ask you to choose which app you want to use for navigation (e.g. Waze, Google Maps).
- Off Road is the same, but uses a different Android “intent” which means that Android will ask again for your choice and will remember that choice separately. So you can choose a different app e.g. Back Country Navigator or another OS mapping app.
- Show Route uses an embedded (i.e. within this app) Google Map to show road directions to the payload.

If you later want to change which apps are invoked from the Directions screen, go to Android Settings → Apps, choose the existing app, then choose “Open by default”, then “Clear defaults”.

Map Screen

This shows an embedded Google map:

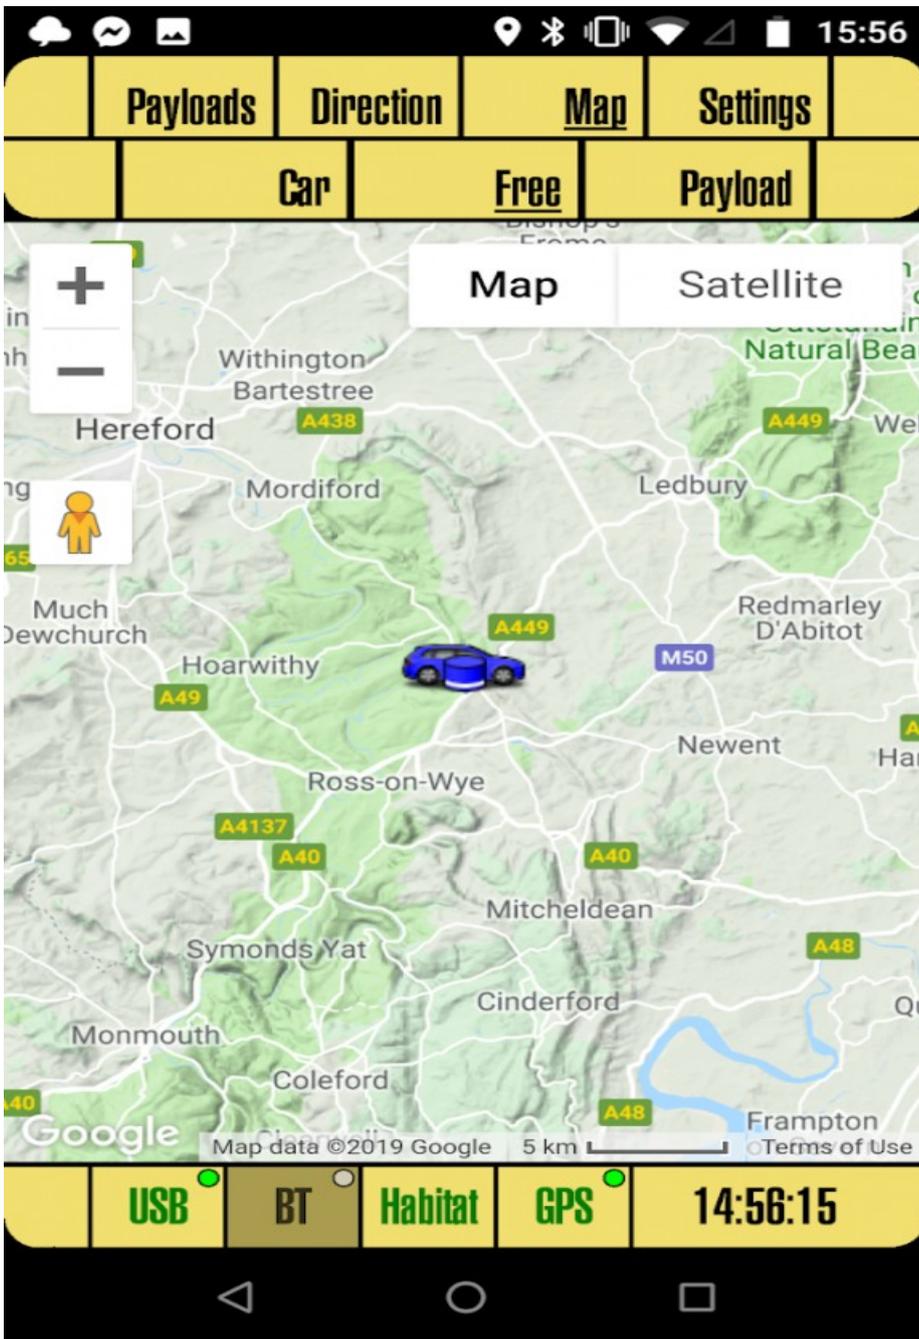

The map will initially centre on your location, but will then allow you to drag the map around at will. If you wish it to remain centred on your location then touch the “Car” button; if you wish it to centre on the payload then touch the “Payload” button.

Raspberry Pi Receiver - LoRa Gateway

To build a LoRa gateway you need:

1. An Uputronics LoRa board:
https://store.uputronics.com/index.php?route=product/product&product_id=68
2. Raspberry Pi
3. Internet connection to the Pi (wired or wireless)
4. 70cm (434MHz) antenna




Physical installation is very simple – just push on to the Pi using a standard pin header extender and secure with standoffs and bolts (all supplied).

Software Installation

Next, burn an operating system onto a suitable SD card. For this purpose anything from 8GB and up should be fine. The following instructions are for Raspberry Pi OS Lite.

First, run raspi-config:

```
sudo raspi-config
```

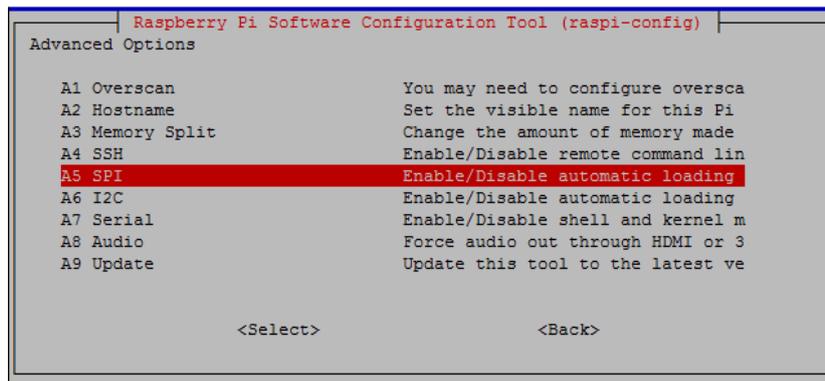

Then choose Advanced Options → SPI and enable SPI.

It's also worthwhile to change the hostname (Advanced Options → Hostname) to something like "LoRaGateway". Finally, close the program and agree to reboot the Pi.

Once rebooted, login again. We now have some software to install. First, install wiringPi, which is used for the SPI library and to read the status of the LoRa module:

```
sudo apt-get install wiringpi
```

The gateway software uses the curl library for internet access (uploading telemetry data and/or image data), so install that:

```
sudo apt-get install libcurl4-openssl-dev
```

and the ncurses library used for the screen display:

```
sudo apt-get install libncurses5-dev
```

Finally, install the gateway software itself:

```
cd ~
git clone https://github.com/PiInTheSky/lora-gateway.git
cd lora-gateway
make
cp gateway-sample.txt gateway.txt
```

That completes the installation, so now for the configuration. The main settings are in a file gateway.txt in the above folder (/home/pi/lora-gateway). Here's a simple example:

```
tracker=MYCALLSIGN  
frequency_1=434.450  
mode_1=1  
AFC=Y
```

This firstly sets your callsign, which if you are a radio amateur would normally be your radio callsign, but it can be something else.

The next part sets the frequency and mode for the second LoRa device (the one in position "CE1"). Frequency is in MHz and should match the frequency of your FlexTrak tracker. Same applies for the mode.


For full details on all settings see the README.md file.

For an aerial, you can make a quarter-wave aerial or buy something commercially, for which we recommend a collinear aerial, for example:

<https://www.nevadaradio.co.uk/product/watson-w-30/>

Ideally, get the aerial high and away from obstructions.

Getting On The Map

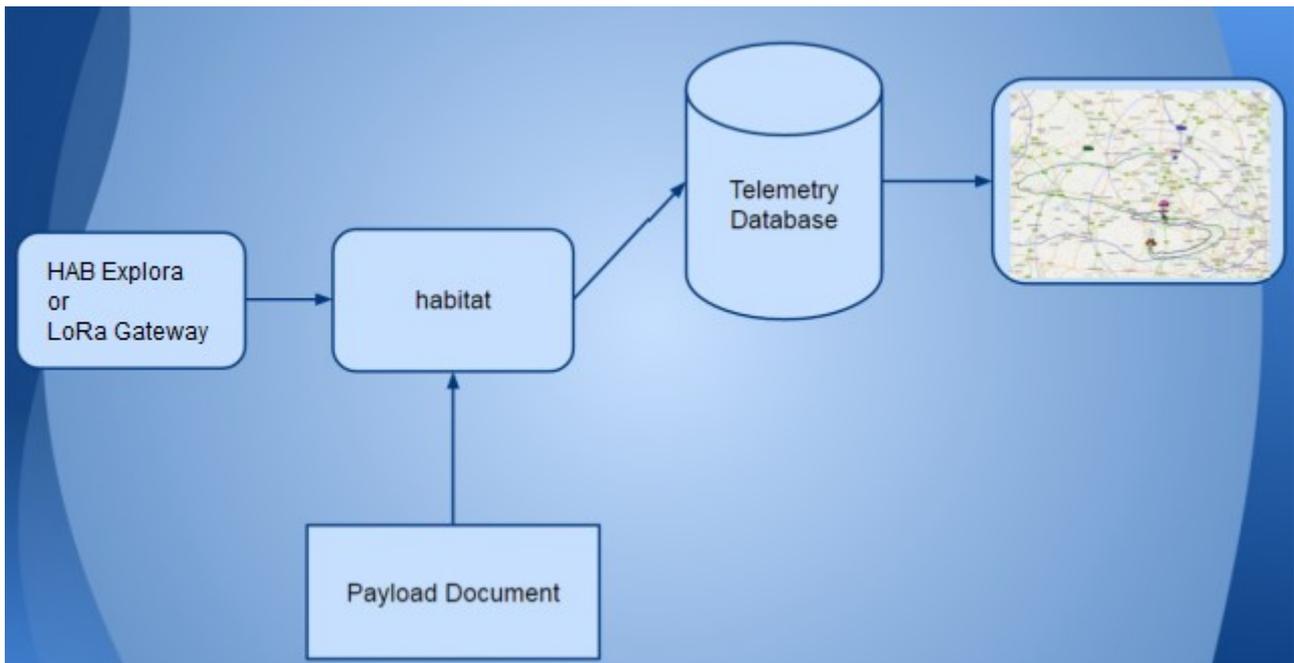

The above diagram shows how data from HAB Explora or the LoRa Gateway gets onto the map. First, the receiving software connects via the internet to the “habitat” server. Multiple receivers may be doing this (remember, you may have one at school and one in your chase vehicle, plus the high altitude balloon community may be uploading too) so even if you miss some data in the chase vehicle (e.g. it's in a tunnel) then hopefully someone else will have uploading the missing data.

All uploaded data goes into a database, and the latest good data then gets fed to the live map at tracker.habhub.org. All of this though relies on that “Payload Document” box at the bottom.

The purpose of the payload document is to tell the habitat software how to interpret the incoming payload telemetry. This telemetry varies in structure from one payload to another, as some payloads might for example send 2 or 3 different temperature readings, a pressure reading, and perhaps humidity too, all in addition to the usual latitude, longitude and altitude. Every payload therefore needs a payload document otherwise it will not appear on the map.

habitat knows which document to use, by inspecting the start of the telemetry packet where it expects to find the “Payload ID”. For FlexTrak this defaults to PIAVR, but you should have changed that by now as per the instructions earlier.

To create a payload document for your payload, start at this URL:

<http://habitat.habhub.org/genpayload/>

where you will see...

payload configuration documents

payload_configuration documents describe a payload (no prizes for guessing that). They contain instructions to habitat: how to parse telemetry that listeners upload; and radio settings: how to setup listeners' radios. If you fly one payload multiple times, you shouldn't have to change payload configuration document.



flight documents

flight documents describe the time and date of a planned flight. They allow us to add the flight to the calendar, set the title on the tracker, and select only relevant telemetry to go into the flight archive (i.e., exclude test data).



A flight document contains a list of payload configuration documents - i.e., the payloads that are going to be launched. You can add more than one, if there are several payloads on one balloon/flight train - but for multiple launches, create a flight document per balloon.

Click on “start from existing”, as we are going to use an existing document as a starting point, to save time. Type in “FLEXTRAK” in the box, and you will see this:

The screenshot shows the habitat database browser interface. At the top, there is a blue header with the habitat logo and the text 'genpayload'. Below the header, the title 'Database browser' is displayed. A search bar contains the text 'flextrak'. To the right of the search bar are buttons for 'Search', 'Prev Page', 'Next Page', and 'Cancel'. Below the search bar, a table of search results is shown. The first result is for 'FLEXTRAK' with a description starting with '"FLEXTRAK SAMPLE CHANGE PAYLOAD NAME ABOVE AND IN BELOW CONFIGURA...' and a timestamp of '2020-06-15T14:23:09+01:00'. The ID 'ae4f1f24c62b814939d029ba4bc2aa6e' is also visible.

then click on the entry in the resulting list.

It is **vital** that you now change some settings to match your payload, otherwise your payload won't appear on the map and you won't be able to easily find the payload document later.

First, the "payload name"; I suggest you enter your payload ID here, followed by frequency and LoRa mode, which helps other people track your flight. Then change the description to something like "XYZ School HAB flight 2020"

 genpayload

Payload configuration

Payload name

Need not be its callsign.

Description

Free form, optional.
Used only to help you find it later.

Radio and telemetry configuration

Parser configuration

FLEXTRAK SAMPLE: \$FLEXTRAK,sentence_id,time,latitude,longitude,altitude,satellites,battery,temperature_internal,t...

Next, click the Edit button to the right of “Parser Configuration”, to show this screen:

The screenshot shows the Habitat interface for editing a sentence parser configuration. At the top is the Habitat logo. Below it is the title "Sentence editor" and subtitle "Parser configuration".

The configuration fields are:

- Description: MYHAB 434.250MHz Mode 1
- Protocol: UKHAS
- Callsign: MYHAB| (with a green checkmark)
- Checksum type: crc16-ccitt (dropdown)

A callout box on the right says: "Optional but strongly recommended, No-lock format (if i.e., more fields), and so".

Below these fields is a section titled "fields" containing a table of field definitions:

Field Name	Type	Format	Status
sentence_id	Integer		✓
time	Time		✓
latitude	Coordinate	dd.dddd	✓
longitude	Coordinate	dd.dddd	✓

Set Description as on the previous screen.

Set Callsign to match what you set in flextrak.ini **otherwise this won't work and your payload won't appear on the map.**

If you've not added any extra sensors, then that's the only change you need to make; we describe how to add fields for extra sensors in the section about connecting those sensors. So, click Save to save the new payload ID, then Save on the next screen to save the payload document.

So, provided that:

- Your tracker is running
- It has a GPS lock (flashing green LED)
- You are receiving and decoding in HAB Explora and/or LoRa Gateway
- You checked the "Upload" button in HAB Explora, and/or set "Enable_Habitat=Y" in the LoRa gateway gateway.txt
- You have an internet connection
- Your payload document was saved
- Your payload document matches your tracker settings

then your tracker should appear on the map:

<https://tracker.habhub.org/>

If it doesn't appear within a few seconds, then check the logtail (<http://habitat.habhub.org/logtail/>) which should tell you what is wrong.

Flying

Of course, flying a balloon is a lot more than just getting your tracking working. Hopefully by now you've read through our guide to flying:

<http://www.daveakerman.com/?p=1732>

but if not, **do it now!**

To add to the advice in that document, we have some more specific topics to cover before you launch your balloon:

- Making a payload aerial
- Mounting the Pi camera
- Tracker battery power
- Payload Design
- Flight Document
- Launch Announcement

Making A Payload Aerial

We supply a “pigtail” which is a short length of coax cable with an SMA plug on the end to connect to the tracker. This is not **yet** an aerial; you need to adapt it to make an aerial.

To do this, see this guide: https://ukhas.org.uk/guides:payload_antenna

Or see this video for a solderless method: <https://www.youtube.com/watch?v=xemKyV1H6Xs>

Mounting The Pi Camera

The camera can be mounted inside or outside your payload, but inside is better as it physically protects the camera. If you do mount it outside make sure that all the edges are taped down so that the payload lines cannot get underneath the camera and remove it (this can happen when the balloon bursts and the line is no longer under tension).

Sometimes it is easier to mount the camera upside down, in which case the images will be inverted. To fix that, set “Rotate=True” in the [Camera] section of flextrak.ini file (see the configuration part of this document).

Tracker Battery Power

For flight you should power the tracker from 4 Energizer Lithium Ultimate AA cells.

We do not recommend other makes of similar cells as they do not perform as well.

Do not use alkaline cells instead; there's a very high risk of your tracker stopping during flight when the cells get too cold.

Do not use a USB powerbank instead; these also do not work well in cold temperatures.

4 AA cells will give a run time of 19-20 hours which should be plenty for a flight of 2-3 hours.

Payload Design

The guide linked to above has a section about payload design so please read that.

For the FlexTrak tracker, the GPS antenna is part of the tracker itself. Since the GPS should be near the top of the payload box, away from other devices (e.g. video camera) that advice also applies to the tracker. So mount the tracker just under the top lid of the payload box, with the tracker oriented with the GPS at the top and the SMA socket below. The radio aerial SMA then screws into the SMA socket, and the radio aerial is mounted underneath the bottom of the payload box.

Flight Document

As far as the tracking is concerned, there's one more task to do before flying, and that's to create and have approved a "flight document". This document tells others where and when you are launching, and on what frequency etc. Depending on where you are located, you may then find that you have 15-20 others receiving, decoding and uploading your radio signals for you.

Do not make the flight document until you have made and tested your payload document. That's because it's if the payload document doesn't work (often the case if you haven't made one before) then the flight document will be invalid anyway and will be a waste of time.

This does not remove or even reduce the need for you to receive your own telemetry data at launch (so you know it's working) or in the chase vehicle (so you can locate the payload after it has landed. The other listeners will only be able to help once the flight is up above a certain altitude (which depends on the distance between them and the balloon, plus other factors) so do not rely on them.

To create the flight document. Go to this URL:

<http://habitat.habhub.org/genpayload/>

and choose "create new" next to "flight documents". Fill in the form (it should all be obvious what you need to do) making sure you click on "Add" next to "payloads in this flight", and add your payload document which you can search by payload name. When it's all saved you will be presented with a "document ID" which you **must** keep a copy of.

Flight documents need to be approved by request on IRC (Internet Relay Chat). Due to the attentions of a spammer, IRC now requires registration:

IRC

Joining IRC for the first time used to be easy, but due to some cretin spamming a great many IRC channels last year, both of the UKHAS IRC channels (#highaltitude and #habhub) have been locked down so that only registered users can post.

#highaltitude – this is for general chat about ballooning. It's the perfect place to ask any questions you may have, or to announce your flight.

#habhub – this is for getting flight documents approved

To join IRC you need to create yourself an account. First, open the web client: <https://webchat.freenode.net/#habhub> and you will see the following page:

freenode IRC

Nick

I have a password

Channel

I'm not a robot  reCAPTCHA
Privacy - Terms


Start

Fill in your chosen nickname (not that one!). The channel is filled in for you but you can change that if you want to join a different channel. Finally, check the “I’m not a robot” box, even if you are a robot, and click the Start button.

You will then be joined to the #habhub channel, and you will see the list of current members (people online at the moment) and any new messages that they post. However you will not yet be able to post messages.

Look at the bottom of the screen, and you will see a box with your nickname in it, and a blank box next to that where you type the following:

```
/msg NickServ REGISTER password youremail@example.com
```

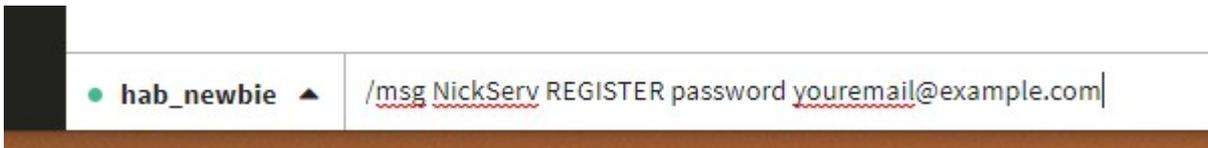

Obviously (I hope!), you should use a better password than “password”, and you should use your own email address. You need to have access to that email in order to complete the process.

Now, check your email. You should receive something like this:

freenode Account Registration ▶ Inbox x

freenode <noreply.support@freenode.net>
to hab_newbie ▾

hab_newbie,

In order to complete your account registration, you must type the following command on IRC:

`/msg NickServ VERIFY REGISTER hab_newbie vxy [REDACTED]`

Thank you for registering your account on the freenode IRC network!

--
This e-mail was sent due to a command from hab_newbie[5ec4b78b@94.196.183.139.threembb.co.uk] at Mon, 03 Feb 2020 09:52:50 +0000. If this message is unsolicited, please contact support@freenode.net with a full copy.

Now, copy the entire “/msg NickServ...” line given in that email, go back to the IRC client page in your browser, and paste it into the box at the bottom:



Press ENTER and your password is confirmed. You can now post into #habhub, #highaltitude or any other IRC channel on Freenode.

Flight Document Approval

Do not do this until you have proven that your payload document works (i.e. your balloon appears on the map). Just remember this sequence:

1. Set up your tracker
2. Create a payload document for it
3. Upload telemetry from your tracker
4. Check that your balloon appears on the map
5. (if not, check logtail and fix the payload doc)
6. When you have a firm launch date, make the flight doc
7. Ask for that flight doc to be approved

To get approval, create yourself an IRC account (see above) and then join the #habhub channel. Then paste the flight document ID that you created earlier.

Within a few seconds, a bot will check that your flight document ID is valid. It will then display your project name etc., and will (hopefully) say something like “Payload ABC tested 2 days ago”. If instead it says that the payload is “untested” then this means that the payload document referred to in your flight document has not been used to put a balloon on the map, so give yourself a slap for not following instructions and go back and check where you went wrong. Typically that would be either that you didn’t get your balloon on the web map, or that you created multiple payload documents and referenced the wrong one from your flight document.

If this all sounds a bit draconian, it’s there to help prevent people from flying without working tracking which, of course, would be a bad thing.

So, assuming that you got a response of “payload XXX tested ...” then you should await the attentions of an admin. The admins aren’t around all the time, so you may not get an immediate approval, so either stay connected and check later, or you can at anytime just repost the flight ID and the bot will say if it’s been approved or not.

Flight Announcement

We also recommend that you join the **#highaltitude** IRC channel to introduce yourself to the ballooning community, and to tell people when your flight is planned to happen.

The channel contains many fellow balloonists, many of whom will be very interested in helping track your flight for you. Getting help in this way is a **very good thing**. Not only will they help fill in gaps in reception during the flight (so you will get better pictures than otherwise) you may well find that one of them gets a better final position than you do in your chase vehicle.

Also, it's a friendly place with a wealth of experience, so if there's anything you don't understand or wasn't answered in this document or the document linked to above (<http://www.daveakerman.com/?p=1732>) then feel free to ask.

It's especially useful if you connect to that channel when you are preparing the launch itself. You can ask any last-minute questions, let the community know how you're getting on, and then tell them when you're about to launch. They will then tune in to your payload's transmissions and help you track. They can be particularly helpful in telling you where to wait whilst the flight comes in to land, and offer advice on how to retrieve it.

If your first venture into #highaltitude is to say something like "I flew my balloon yesterday and now it's lost please help" (and this happens depressingly often) do not expect miracles; do expect some questions as to why you left it so late! The HAB community is especially helpful to newcomers but they can only help before and during your flight – afterwards is almost certainly too late. There's a high correlation between getting involved in the channel prior to flight and having a successful flight.

After The Flight

Reading Flight Images on a PC

After your flight, you will want to access the Pi photographs and maybe upload them to social media etc. The quickest way to do this is to pop the micro SD card into a laptop and read the images there.


However, neither Windows nor OSX can access the Linux partition on the Pi SD card without special software being installed. Here we discuss the DiskInternals Linux Reader program which works on Windows; there are other programs available for Windows and OSX.

First, download and install the software.

Insert the Pi SD card into your PC's card reader, using an adapter if necessary. Then run the Linux Reader program (if you insert the card after starting the program, then press F2 to refresh the drive list). You will see something like this:



Double-click on the "Linux Ext" partition under "Drives with Removable Storage", and not the entry in "Physical Drives". You will then see the contents of the partition:

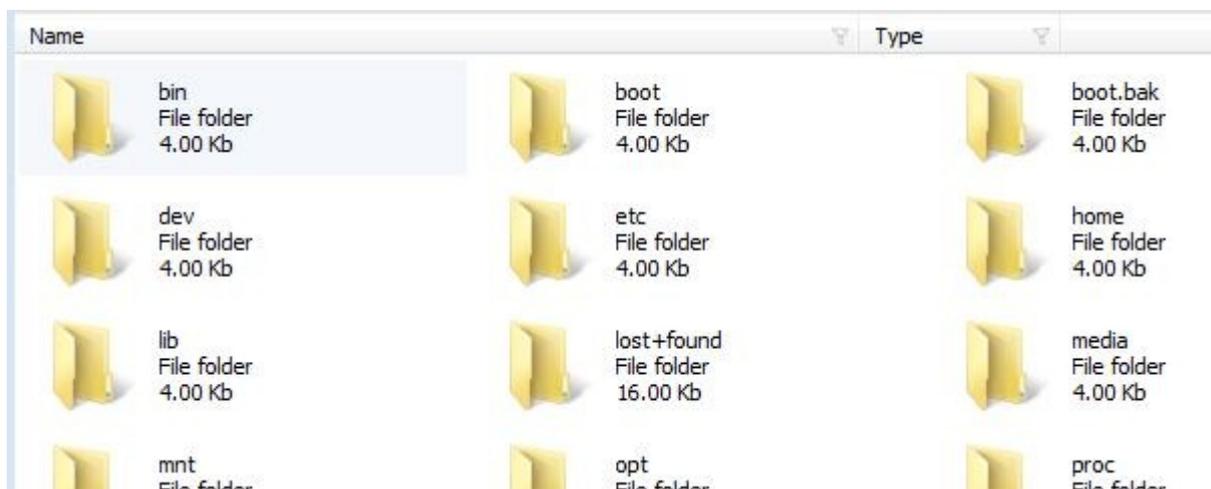

Open (by double-clicking again) the "home" folder, then the "pi" folder, then the "flextrak" folder, then the "images" folder. You will then see the following folders:

- FULL (for full-sized images)
- LORA (for images taken for the LoRa radio channel)

Within each of those 2 folders mentioned, you may see a number of dated folders, one per date that the tracker stored images on. Note that the Pi only knows the current date and time if it is connected to the internet or if it has a GPS lock, so any photographs taken otherwise (i.e. disconnected from the internet and without a GPS lock) will have incorrect timestamps and will possibly be stored in the wrong dated folder.

You can view images directly in the program, simply by navigating to the folder you are interested in, and clicking on an image file.

To copy images to a PC drive, first select them (you can select all with CTRL-A or right-click on an image then choose Select All from the menu), and then click the Save button on the toolbar. The program will then ask where to save the files.

FAQ

Why doesn't my Pi boot?

Make sure the SD card is properly inserted; if in doubt remove it and re-insert. The green "ACT" light should flash after power-up, and then flicker as the Pi boots; if not then you will probably see that it is very weakly lit, which means that the Pi cannot boot from the SD card. Next most likely issue would be the power supply.

What batteries do you recommend?

AA size Energizer Lithium cells. These are specified to work at down to -40C and are known to be reliable in high altitude balloon flights.

Do not use other types of cell. Do not use a Powerbank.

What run time should I expect?

About 19-20 hours for FlexTrak with the above cells, assuming no extra boards connected.

It all works except there are no images being downloaded

Check that the camera is connected, that images are configured correctly in flextrak.ini. Also check that the SD card isn't full.

If you made your own SD card then check that the camera is enabled in raspi-config, and that you didn't skip the installation of SSDV.

It doesn't appear on the map

Check that you have GPS lock (i.e. the telemetry includes your position), that your receiver is set to upload to the internet, and that you have created a payload document for your payload ID.

Manual Installation

SD Image

This section is in case you need to replace the supplied pre-programmed SD card.

Your first task is to place an operating system onto a Micro SD card, so the Pi can be booted. Any card 8-32GB will do fine; we use Sandisk Ultra but there are other makes and models of course. **Always use a reputable make from a reputable source.**

First, download the latest a Raspbian Lite image from the RPi download page, following these instructions. We *do not* recommend using the full version of Raspbian as it boots into X (a graphical screen) by default, and our instructions assume otherwise; it is also rather large and will take up a lot of space on your SD card.

If you use a different distribution and encounter errors then we may not be able to help.

The following instructions work for Raspbian Stretch Lite. We test each new major version as they are released. Please note that Raspbian changes frequently, and sometimes changes in the operating system can require us to change these instructions. We suggest checking [LINK] for any updated instructions, and that you follow our twitter feed @pitsproject for the latest news.

You should download the latest Raspbian Lite image from the official Raspberry Pi website:

<https://www.raspberrypi.org/downloads/raspbian/>

and follow the instructions linked to on that page:

<https://www.raspberrypi.org/documentation/installation/installing-images/README.md>

There are separate instructions depending whether you are using Linux, Windows or a Mac to write the image to your SD card.

When you are done, follow the instructions in the next section to boot the operating system on your Raspberry Pi.

Initial Boot

Insert the SD card into an Raspberry Pi.

1. USB keyboard to any USB socket
2. Monitor to the HDMI socket
3. Wired network to the RJ45 LAN socket*
4. (do this last) Connect an approved power adapter to the Pi USB power socket

* For the Pi Zero and Pi A+ boards, use a USB-LAN adapter with spare USB socket for your keyboard.


You should initially see a rainbow pattern on the monitor, followed by a lot of scrolling text. Eventually that should stop scrolling and you will see a "Login:" prompt. Type in **pi** and press ENTER. You will then be asked for a password, which is **raspberrypi**.

raspi-config

Once logged in, type the following command:

```
sudo raspi-config
```

and you will see the following screen (exact contents can vary with version):

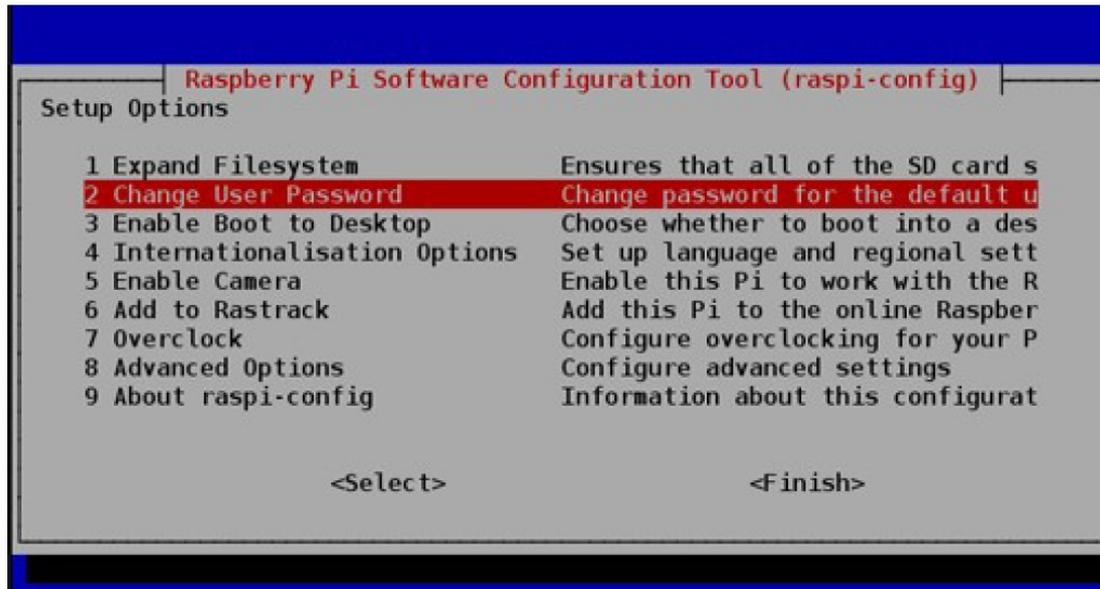

Using the cursor keys to navigate the menu, and the ENTER key to select an option, make the following changes:

1. **Enable Camera**
2. **Advanced Options --> Disable Serial Login / Enable Serial H/W**

When you have made those changes, choose the Finish option and you will be asked if you want the Pi to reboot – answer Yes. Wait for that to complete, then login again.

Serial Port

This section is ONLY needed by users with Pi that has built-in Bluetooth (Pi Zero W, Pi 3, Pi 3A+, Pi 3B+, Pi 4B).

Built-in Bluetooth needs to be disabled so that the full serial port can be used by the FlexTrak board. **You therefore cannot use the Bluetooth module with FlexTrak.**

You need to disable the bluetooth module, and map the now-free serial port to the GPIO pins. To do this, edit `/boot/config.txt`, using nano or the editor of your choice:

```
sudo nano /boot/config.txt
```

then go to the end of the file and add a new line containing this:

```
dtoverlay=pi3-disable-bt
```

Exit the editor, saving your changes.

Now type this command:

```
sudo systemctl disable hciuart
```

Install Updates

Raspbian Updates

The the Pi rebooted and logged in, run these commands (after each command, press ENTER then wait for the command to complete).

```
sudo apt-get update  
sudo apt-get upgrade
```

The second command may take a while.

Software Installation

Run these commands:

```
sudo apt install git
sudo apt install ssdv
sudo apt install minicom
sudo apt install wiringpi
sudo apt install avrdude
git clone https://github.com/daveake/flexavr.git
git clone https://github.com/daveake/flextrak.git
sudo apt install python3-picamera
sudo apt install python3-serial
cd flextrak
sudo cp -f tracker.service /lib/systemd/system
sudo cp -f flextrak.ini.sample /boot/flextrak.ini
sudo systemctl enable tracker.service
sudo systemctl start tracker.service
```

This completes the software installation.

Updates

Software Update

First, switch the programming switch on FlexTrak to the “P” (Programming) position.

Run these commands to download the latest firmware from the internet and then program the flextrak board:

```
cd ~/flextrak  
git pull
```

Firmware Update

First, switch the programming switch on FlexTrak to the “P” (Programming) position.

Run these commands to download the latest firmware from the internet and then program the flextrak board:

```
cd ~/flexavr  
git pull  
./a
```

You should return the programming switch on FlexTrak to the “F” (Flight) position before flight.

Software

If you wish to see the software running, you need to start it manually. Login to the Pi (using a screen and keyboard, or ssh connection) then type the following commands:

```
cd flextrak
sudo killall startup
python3 tracker.py
```

The screen should look something like this:

```
Load tracker ...
FlexTrak Module Loaded
Loading config file flextrak.ini
Start tracker ...
AVR module init
Comms module started
AVR module connected
Comms thread
Loop ...
TX: CH0
*
TX: CV
*
TX: CPPIAVR
*
TX: CF01234569ABCD
```

As you can see, the Pi software is written in Python. If you wish you can edit the software. Remember that even with the Pi software stopped, the tracker keeps running and you will still be able to receive its telemetry.

The Pi software is built as a module (flextrak.py), which itself uses several other modules (e.g. lora, gps). There is also a sample tracker program tracker.py which loads the flextrak module and passes the configuration file flextrak.ini to it. **If you want to modify the tracker, then tracker.py is the best one to change.** If for example you want to add extra sensors, then load the module(s) for those sensors in tracker.py, build a partial telemetry string with the values from the sensors, and then pass this string to the flextrak module. It provides a “callback” precisely for this purpose, which means that you can simply return the telemetry string is the result of that callback function.